

FOLDING INSTRUCTIONS

THE FRESHMAN

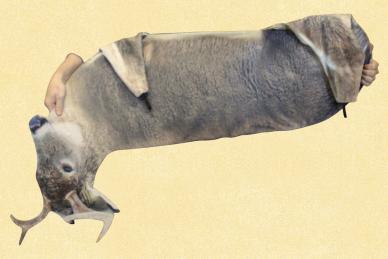

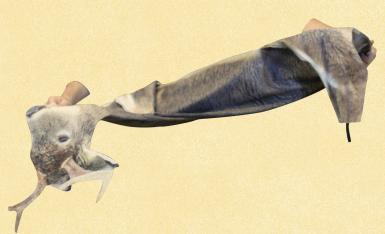



- START by holding the decoy horizontally out away from your body with the head down.
- With one hand--thumb pointing up, and the other hand, thumb pointing down--twist the hand with the thumb pointing up forward...
- ...and the hand with the thumb pointing down backward.



As you start the twisting motion, push inward like an accordion.
Continue to twist and push, then cross your hands and bring the decoy into your body. The band in the decoy will form three rings...



...which will line up over each other as you continue twisting, locking gently into place.
Congratulations! You now have a compact decoy, easy for stowing and carrying.

POLE DIRECTIONS:

Enclosed are two leg poles; insert both poles (opposite end of the metal stake) into a sleeve sewn inside the decoy.

The sleeve opening is located in the bottom of each decoy leg. Slide the poles up into the sleeve and hook the elastic strap onto the adjustable pole clip or over the metal foot peg.

Step the pole into the ground and you're set up!



ATTENTION

By using this or any decoy or product offered by Montana Decoy, you acknowledge that you know how to properly and safely use the decoy at all times and in all situations that may arise. If you do not know how to properly use this decoy in all situations, do not use the decoy. By using the decoy, you acknowledge, understand and assume all risk of injuries that are inherent to hunting and the use of decoys (which can be life threatening or deadly). Montana Decoy will not be liable for any injury or other damage arising out of or related in any way to the use of this decoy. If you do not accept the risk of injuries and/or Montana Decoy's disclaimer of liability, then you must not use the decoy.

All users should take and complete hunter education courses to learn more about safety while hunting. You must obey all state game and hunting laws and regulations. Only adults trained in proper shooting procedures should use this decoy.

Never use this decoy in areas with other hunters. Never set up or display this decoy in a manner that could place you or others at risk for an accidental shooting if another hunter or person doesn't properly identify their target.

